# ネットワークカメラ

### 設置説明書

#### **Installation Manual**

Before operating the unit, please read this manual thoroughly and retain it for future reference

#### お買い上げいただきありがとうございます。

電気製品は、安全のための注意事項を守らないと、火災 や人身事故になることがあります。

この設置説明書には、事故を防ぐための重要な注意事項と製品の取り 扱いかたを示しています。この設置説明書をよくお読みのうえ、製品 を安全にお使いください。お読みになったあとは、いつでも見られる ところに必ず保管してください。

### SNC-M3/M3W

**(ED)** 

Sony Corporation © 2004 Printed in Taiwan

# 安全のために

ソニー製品は正しく使用すれば事故が起きないように、安全には充分 配慮して設計されています。しかし、電気製品は、まちがった使いか たをすると、火災や感電などにより死亡や大けがなど人身事故につな がることがあり、危険です。 事故を防ぐために次のことを必ずお守りください。

- 安全のための注意事項を守る。
- 長期間、安全にお使いいただくために、定期点検をすることをおすす めします。点検の内容や費用については、お買い上げ店またはソニー の業務用製品ご相談窓口に相談する。
- 破損したら使わずに、お買い上げ店またはソニーの業務用製品ご相談 窓口に修理を依頼する。

## 警告表示の意味


この設置説明書および製品では、次の ような表示をしています。表示の内容 をよく理解してから本文をお読みくだ さい。

⚠警告 この表示の注意事項を守らないと、火災

や**感電**などにより**死亡や大けが**など 人身事故につながることがあります。

<u></u> 注意 この表示の注意事項を守らないと、感電

やその他の事故により**けが**をしたり周 辺の物品に**損害**を与えたりすることが あります。

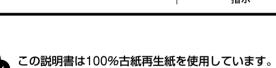

「ソニー業務用製品ご相談窓口のご案内」にある窓口へ ソニー株式会社

〒141-0001 東京都品川区北品川6-7-35 http://www.sony.net/

下記の注意事項を守らないと、火災や感電 により**死亡**ゃ**大けが**につながることがあ ります。

### 設置や配線工事のときに屋内配線や屋内配管を傷つ けないよう気をつける




特に壁に穴を開けたり、電源コードやケーブルを固定 したりするときは充分に気をつけてください。屋内配 線や屋内配管の傷は、火災や感電、漏電の原因となりま す。

# 壁や天井に設置するときは、ACアダプターが落下し ないようしっかり固定する



ACアダプターが落下して頭にあたると、大けがの原因

電源コードやケーブルを窓やドアにはさみ込まない

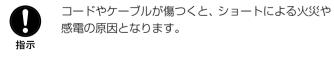

# 医療機器の近くで無線通信機能は使わない



電波が心臓ペースメーカーや医療用電気機器に影響を 与えるおそれがあります。満員電車などの混雑した場 所や医療機関の屋内では使わないでください。

## 無線通信機能を使用している場合、心臓ペースメー カーの装着部位から離すこと



電波によりペースメーカーの動作に影響を与えるおそ れがあります。

## 自動ドア、火災報知器などの自動制御機器の近くで は無線通信機能は使わない



電波が影響を及ぼし、誤動作による事故の原因となる おそれがあります。

無線通信機能を使用中に他の機器に電波障害などが 発生した場合は、電源を切って通信機能の使用を中 止する

電波が影響を及ぼし、誤動作による事故の原因となる おそれがあります。

# 分解や改造をしない

分解や改造をすると、火災や感電、けがの原因となること があります。

分解禁止 内部の点検や修理は、お買い上げ店またはソニーの業務用 製品ご相談窓口にご依頼ください。

### 指定された電源ケーブルやAC電源アダプター、接続 ケーブルを使う

直射日光に当たる場所、熱器具の近くには置かない




設置説明書に記されている電源ケーブルやAC電源アダプ ター、接続ケーブルを使わないと、火災や故障の原因とな ることがあります。

#### 変形したり、故障したりするだけでなく、レンズの特性に より火災の原因となることがあります。特に、窓際に置く



ときなどはご注意ください。

## 水にぬれる場所で使用しない

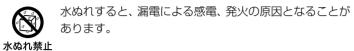

#### ぬれた手で電源プラグをさわらない



ぬれた手で電源プラグを抜き差しすると、感電の原因とな ることがあります。

#### 指定された電源電圧で使用する



指定されたものと異なる電源電圧で使用すると、火災や感 電の原因となります。

# 設置は専門の工事業者に依頼する



設置については、必ずお買い上げ店またはソニーの業務用 製品ご相談窓口にご相談ください。

壁面や天井などへの設置は、本機と取り付け金具を含む重 量に充分耐えられる強度があることをお確かめの上、確実 に取り付けてください。充分な強度がないと、落下して、 大けがの原因となります。

また、1年に1度は、取り付けがゆるんでいないことを点 検してください。また、使用状況に応じて、点検の間隔を 短くしてください。

### 機器や部品の取り付けは正しく行う



注意を促す記号

水ぬれ禁止 ぬれ手禁止

行為を指示する記号

禁止

機器や部品の取り付け方や、本機の分離・合体の方法を誤る と、本機や部品が落下して、けがの原因となることがあり ます。

設置説明書に記載されている方法に従って、確実に行って

### 内部に水や異物を入れない



水や異物が入ると、火災の原因となります。 万一、水や異物が入ったときは、すぐに本機が接続されて いる電源供給機器の電源コードやDC電源ケーブル、本機 の接続ケーブルを抜いて、お買い上げ店またはソニーの業 務用製品ご相談窓口にご相談ください。

### 雨のあたる場所や、油煙、湯気、湿気、ほこりの多い場所 には設置しない



上記のような場所やこの設置説明書に記されている仕様条 件以外の環境に設置すると、火災や感電の原因となること

# AC電源コードを傷つけない





AC電源コードを傷つけると、火災や感電の原因となります。

コードを加工したり、傷つけたりしない

重い物をのせたり、引っ張ったりしない

熱器具に近づけたり、加熱したりしない コードを抜くときは、必ずプラグを持って抜く 万一、コードが傷んだら、お買い上げ店またはソニーの業

# 務用製品ご相談窓口に交換をご依頼ください。



ぐらついた台の上や傾いたところ、振動や衝撃のかかると ころに設置すると、倒れたり落ちたりして、けがの原因と

なることがあります。 また、設置・取り付け場所の強度を充分にお確かめください。

# 電波障害自主規制について(SNC-M3Wのみ)

本機は電波法第4条、電波法施行規則第6条により技術適合証明を受 けております。本機には(財)無線設備検査検定協会の技術基準適合証 明ラベルが貼ってあります。このラベルをはがしたり、本機の内部を 改造して使用したりすることは電波法で禁じられています。

この機器は2.4GHz帯の無線チャンネル1~13まで使用することができ ますが、他の無線機器も同じ周波数を使っていることがあります。他の 無線機器との電波干渉を防止するため、下記事項に注意してご使用くだ

# この機器の使用上の注意

この機器の使用周波数は2.4GHz帯です。この周波数帯ではレンジ等 の産業・科学・医療用機器のほか、他の同種無線局、工場の製造ライ ン等で使用される免許を要する移動体識別用構内無線局、免許を要し ない特定の小電力無線局、アマチュア無線局等(以下「他の無線局」と 略す)が運用されています。

- 1. この機器を使用する前に、近くで「他の無線局」が運用されていな いことを確認してください。
- 2. 万一、この機器と「他の無線局」との間に電波干渉が発生した場合 には、速やかにこの機器の使用チャンネルを変更するか、使用場 所を変えるか、または機器の運用を停止(電波の発射を停止)して ください。 B. 不明な点その他お困りのことが起きたときは、お買い上げ店また
- はお近くのソニー業務用製品ご相談窓口までお問い合わせくださ い。詳しくは、本書に記載されている「保証書とアフターサービ ス」をご覧ください。 この無線機器は2.4GHz帯を使用します。変

**2.4DS3** 調方式としてDS-SS変調方式を採用し、与干 

無線チャンネルの変更について詳しくは、『ユーザーズガイド』(CD-ROM)をご覧ください。

本機は、Webサーバーを内蔵したネットワークカメラです。

本機の特長は次のとおりです。

- コンピューターのWebブラウザを使って、カメラの映像・音声をリ
- 搭載メモリー:64MB以上 CD-ROMドライブ:8倍速以上
- アルタイムでモニタリングできます。 ● 映像圧縮方式にMPEG4を採用し、毎秒30フレーム(QVGAサイズ) のスムーズな動画を配信できます。また、映像圧縮方式をJPEGに
- 設定すれば、Motion JPEGによる映像配信もできます。 ● 1/4 型VGA対応のCMOSセンサーの採用により、VGAサイズで高 画質の画像を配信することができます。(VGAサイズの場合は、30
- fps以下のフレームレートになります。) • パン・チルト機能により見たい画枠をリモートで操作することがで きます。また、カメラの向きを8か所まで記憶させることができま
- 標準装備でマイク(モノラル)を内蔵しています。また、プラグイン
- パワー方式(基準電圧2.4V DC)のマイク入力端子(ミニジャック、 モノラル)に市販のマイクを接続することもできます。 ● ライン出力端子(ミニジャック、モノラル)を装備しています。カメ
- ラに市販のアンプ内蔵スピーカーを接続すれば、ネットワークを経 由してスピーカーから音声を出力できます。
- 動体検知機能に連動してメールを送信したり(MPEG4モード時)、 FTPサーバーへ定期的に画像を配信したり(JPEGモード時)するこ とができます。
- 無線LAN対応により、わずらわしいネットワークケーブルの配線が 不要になります。(SNC-M3Wのみ) ● 携帯電話から静止画がモニタリングできます。(対応する携帯電話に

ついては、お買い上げ店またはソニー業務用製品ご相談窓口にお問

い合わせください。) ● 簡単にカメラのネットワーク設定を行うことができるIPセットアッ ププログラムを付属しています。

### 使用上のご注意

使用・保管場所について 次のような場所での使用および保管は避けてください。故障の原因とな

- ります。 • 極端に暑い所や寒い所(使用温度は0 ℃~+40 ℃)
- 直射日光が長時間あたる場所や暖房器具の近く
- 強い磁気を発するものの近く • 強力な電波を発するテレビやラジオの送信所の近く
- 強い振動や衝撃のある所

#### 放熱について

動作中は布などで包まないでください。内部の温度が上がり、故障や事 故の原因となります。

# レンズカバーの取扱について

本機のレンズを覆うレンズカバーに汚れをつけたり、物を当てたり、強 く押さえたりすると、撮影時に本機の性能を充分に発揮できないばかり か、故障の原因となりますのでご注意ください。

### 輸送について

輸送するときは、付属のカートンとクッション、または同等品で梱包 し、強い衝撃を与えないようにしてください。

# お手入れについて

ます。

- レンズカバーの表面に付着したごみやほこりは、ブロアーで払って ください。 ● 外装の汚れは、乾いたやわらかい布で軽く拭き取ってください。汚
- れがひどいときは、中性洗剤溶液を少し含ませた布で汚れを拭き 取ったあと、からぶきしてください。 • アルコール、ベンジン、シンナー、殺虫剤など揮発性のものをかけ ると、表面の仕上げをいためたり、表示が消えたりすることがあり

# レーザービームについてのご注意

レーザービームはCMOSセンサーに損傷を与えることがあります。 レーザービームを使用した撮影環境では、CMOSセンサー表面に レーザービームが照射されないように充分注意してください。

|付属の説明書について 本機には、以下の説明書が付属されています。

# 設置説明書(本書)

この設置説明書には、カメラ本体の各部の名称や設置、接続のしかたが 記載されています。操作の前に必ずお読みください。

ユーザーガイド(CD-ROMに収録) カメラのセットアップの方法や、Webブラウザを介したコントロールの

方法が記載されています。 ユーザーガイドの開きかたは、下記の「CD-ROMマニュアルの使いか た |をご覧ください。

# CD-ROMマニュアルの使いかた

付属のCD-ROMには、本機のユーザーガイド(日本語、英語、フランス 語、ドイツ語、スペイン語、イタリア語)が収録されています。

### CD-ROMの動作環境

付属のCD-ROMを動作させるには、次の環境が必要です。

- コンピューター: Intel Pentiumプロセッサー搭載のコンピューター
- ディスプレイモニター:解像度800 × 600ドット以上 • OS: Microsoft Windows Millennium Edition, Windows 2000 Service Pack 2、Windows XP Professionalまたは HomeEdition

上記の条件を満たさない環境では、CD-ROMの動作が遅くなったり、 まったく動作しないことがあります。

付属のCD-ROMに収録されているユーザーガイドを使用するために は、以下のソフトウェアがコンピューターにインストールされている必 要があります。

- Adobe Acrobat Reader 4.0以上、またはAdobe Reader 6.0以
- ソフトウェアがインストールされていない場合は、次のURLからダウン
- ロードできます。 Adobe Reader

http://www.adobe.co.jp/products/acrobat/readstep2.html

#### マニュアルを読むには

CD-ROMに入っているユーザーガイドを読むには、次のようにします。 **1** 付属のCD-ROMをCD-ROMドライブに入れる。

- しばらくすると、画面にCD-ROMの内容が表示されます。 **2** SNC-M3/M3Wの「Japanese」というファイル名のPDFをクリッ クする。
  - アプリケーションが起動し、SNC-M3/M3Wのユーザーガイドの 表紙が画面に表示されます。「目次」の各項目をクリックすると、そ の見出しのページが表示されます。

# ご注意

ハードウェアの故障またはCD-ROMの誤使用により、CD-ROM内の情 報が読めなくなったり消失したりした場合は、ソニーのサービス担当者 にご依頼ください(有料)。

# 各部の名称と働き

**①** マイク 本機に内蔵されたマイクです。

② Power(パワー)インジケーター(緑) 電源を投入するとしばらく点灯して消えます。

その後、システムが起動すると再び点灯します。 ❸ レンズ

固定焦点レンズです。f=3.7mm、F2.0

◆ NETWORK(ネットワーク)インジケーター(緑) 電源を投入してシステムが起動するまで点灯します。 イーサネット・ワイヤレスネットワークいずれかに接続されているとき

は点滅します。 ネットワークが接続されていないときは、消灯します。

# 上面

上面にあるふたをはずすと接続端子があります。

# (10BASE-T/100BASE-TX)に接続します。

⑤ 器(ネットワーク)ポート(RJ45)

付属のAC電源アダプターを接続します。 **⑦** リセットスイッチ

先の細いもので、このスイッチを押しながら電源を供給すると、工場出

ネットワークケーブル(UTP、カテゴリー5)を使用してネットワーク

### 荷時の設定に戻ります。 ❸ 【(マイク入力)端子(ミニジャック、モノラル) 市販のマイクを接続します。プラグインパワー方式(基準電圧2.4VDC)

### に対応しています。 ご注意 ▲端子に外部マイクを接続した場合は、外部マイクが優先され、内蔵マ

#### イクは使用できません。 **⑨** □(ライン出力)端子(ミニジャック、モノラル) 市販のアンプ内蔵スピーカーを接続します。

# 底面

**①** 三脚ネジ

付属のスタンドを取り付けます。 付属のスタンド以外を取り付けるときは、取 1/4 - 20 UNC り付け用ネジに、1/4インチ20山ネジ長(4.5  $\ell = 4.5 \pm 0.2 \text{ mm}$ ±0.2 mm)のものお使いください。

C

# ご注意

В

付属の落下防止ひもを通します。

4.5 mm ± 0.2 mm 以外のネジを使用すると、取り付けが不完全になっ たり、本機の内部を損傷して故障の原因となることがあります。

(裏面へ続く)

 Real-time monitoring of the image and sound from the camera is possible using the Web browser on the computer.

The camera has the following features:

• The 1/4 type VGA CMOS sensor offers high-quality video

**About the Supplied Manuals** 

The following manuals are supplied with this unit.

Installation Manual (this document) The Installation Manual describes the names and functions of

the parts of the camera, the installation and connections of the

### camera, etc. Be sure to read it before operating the camera.

User's Guide (stored in the CD-ROM) The User's Guide describes the setup of the camera and the operations from the Web browser. To open the User's Guide, see "Using the CD-ROM Manuals"

The supplied CD-ROM disc includes the User's Guides for this unit (Japanese, English, French, German, Spanish and Italian versions).

#### **CD-ROM System Requirements**

Using the CD-ROM Manuals

The following are required to access the supplied CD-ROM disc. • Computer: PC with Intel Pentium CPU Installed memory: 64

MB or more

CD-ROM drive: x 8 or faster • Monitor: Monitor supporting resolution of 800 × 600 or higher

Service Pack 2, Windows XP Professional or Home Edition

#### Reading the manual in the CD-ROM

To read the User's Guide contained in the CD-ROM disc, do the

Application will start, then display the cover page of the User's Guide Clicking an item in the Table of Contents allows you to jump

Location and Function of Part

Power indicator (green) When the power is turned on, it lights for a while and then goes off. After that, it lights again when the system starts

4 NETWORK indicator (green)

Top

a network cable (UTP, category 5).

6 DC IN 5 V (power input) connector Connect the supplied AC power adaptor.

#### this switch and supply the power to the camera. **③ <sup>★</sup>** (microphone input) jack (minijack, monaural)

Connect a commercially available microphone. This jack

# in microphone.

Attach the supplied stand to this screw. When attaching the camera to a tripod or stand other than the supplied stand, U1/4", 20 UNC use the following mounting screw.

other screws may cause improper mounting and damage parts inside

**1** Hole for the drop-prevention strap

(continued on the reverse side)

C

# WARNING

regarding this product.

Model No. \_

CAUTION:

Owner's Record

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

The model and serial numbers are located on the bottom.

Refer to these numbers whenever you call upon your Sony dealer

Serial No.

This unit is for use only with the supplied AC power

adaptor. Use with other AC power adaptors may

Record the serial number in the space provided below.

To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.

#### AC power adaptor Model No.: 3A-211DA05 (ENG ELECTRIC CO., LTD.)

mains plug of the AC adaptor.

WARNING This unit has no power switch. Disconnect device of this unit is the

cause hazards such as a fire.

The mains plug on this equipment must be used to disconnect mains power. Please ensure that the socket outlet is installed near the equipment and shall be easily accessible. In the event of abnormal operations, disconnect the mains plug.

### Caution

The apparatus shall not be exposed to dripping or splashing and no

For the customers in the U.S.A. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

Responsible Party

Address

of the device.

- Increase the separation between the equipment and receiver. - Connect the equipment into an outlet on a circuit different from that to

Sony's Business Information Center (BIC) at 1-800-686-SONY (7669)

- Consult the dealer or an experienced radio/TV technician for help.

or Write to: Sony Customer Information Services Center

If you have any questions about this product, you may call:

Telephone Number: 858-942-2230 This device complies with part 15 of the FCC rules. Operation is subject

92127 U.S.A.

approved in this manual could void your authority to operate this The shielded interface cable recommended in this manual must be

used with this equipment in order to comply with the limits for a digital

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this deveice must accept any interference, including interference that may cause undesired operation

The term "IC." before the radio certification number only signifies that Industry Canada technical specifications were met. For customers in Europe

is in compliance with the essential requirements and

#### other relevant provisions of the Directive 1999/5/EC. For details, please access the follwing URL: http://www.compliance.sony.de/

picture of the unit. Voor de klanten in Nederland • Dit apparaat bevat een vast ingebouwde batterij die niet vervangen hoeft te worden tijdens de levensduur van het apparaat.

• Raadpleeg uw leverancier indien de batterij toch vervangen moet

worden. De batterij mag alleen vervangen worden door vakbekwaam

recycling, de batterij zal dan op correcte wijze verwerket worden.

Caution Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

廢電池請回收

The SNC-M3/M3W is a network camera equipped with a built-in Web server.

streaming in VGA size. (The frame rate in VGA size is less than

microphone jack (minijack, monaural) accepts a commercially available plug-in-power microphone (rated voltage: 2.4V DC). • The line output jack (minijack, monaural) allows connection of a

motion detection function, or can be sent periodically to an FTP server in JPEG mode. · No difficult wiring is required when using the wireless LAN (SNC-

performance of the network setting.

# OS: Microsoft Windows Millennium Edition, Windows 2000

# When these requirements are not met, access to the CD-ROM disc may be slow, or not possible at all.

### **Preparations**

in order to use the User's Guide contained in the CD-ROM disc. If Adobe Acrobat Reader or Adobe Reader is not installed, it may be downloaded from the following URL: http://www.adobe.com/products/acrobat/readstep2.html

2 Click the PDF file in SNC-M3/M3W folder named the language you want to read.

example, because of a hardware failure or improper use of the disc. contact a Sony service representative for replacement (not free).

# Built-in microphone

O Lens A fixed focus lens (f = 3.7 mm, F2.0) is mounted.

When the unit is not connected to the network, it goes off.

⑤ 문급 (network) port (RJ-45) Connect to a hub on the 10BASE-T/100BASE-TX network using

Reset switch

# supports plug-in-power microphones (rated voltage: 2.4V DC). When an external microphone is connected to the \(^{\left}\) jack, it has priority

Bottom Tripod screw

> $\ell = 4.5 \text{ mm} \pm 0.2 \text{ mm}$ (ISO standard)

pictures with 30 fps (QVGA size). Motion JPEG video streaming is also possible by selecting the JPEG video compression format.

MPEG4 video compression allows smooth streaming of motion

• A microphone (monaural) is built in the camera. Also, the built-in

• You can access the desired image frame by remote operation.

A mail can be sent in MPEG4 mode by synchronizing with the

· The camera is supplied with the IP Setup Program for easy

This installation should be made by a qualified service personnel and should conform to all local codes.

# objects filled with liquid, such as vases, shall be placed on the

which the receiver is connected.

6900-29, Daniels Parkway, PMB 330 Fort Myers, Florida 33912 **Declaration of Conformity (For SNC-M3 only)** : SONY Trade Name Model No SNC-M3

to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received. including interference that may cause undesired operation You are cautioned that any changes or modifications not expressly

: Sony Electronics Inc.

16450 W. Bernardo Dr, San Diego, CA

For customers in Canada This Class B digital apparatus complies with Canadian ICES-003.

# Hereby, Sony Corporation, declares that this SNC-M1W

### **ATTENTION** The electromagnetic fields at specific frequencies may influence the

#### • Gooi de batterij miet weg maar lever deze in als klein chemisch afval (KCA). • Lever het apparaat aan het einde van de levensduur in voor

servicepersoneel

For Customers in Taiwan only

Features

30 fps.)

Up to 8 positions of the camera can be memorized.

commercially available speaker system with built-in amplifier so that the sound transmitted via the network can be output from the connected speaker system.

# The Adobe Acrobat Reader Version 4.0 or later or the Adobe Reader Version 6.0 or later must be installed on your computer

1 Insert the supplied CD-ROM disc into your CD-ROM drive. After a short time a window will open displaying the files on the CD-ROM.

# to the relevant page.

Front

Α

If you lose the CD-ROM disc or become unable to read its content, for


It lights from when the power is turned on until the system starts. When the unit is connect to the Ethernet or to the wireless

Take off the cap on the top of the camera, and you can see the

# To reset the camera to the factory default settings, hold down

over the built-in microphone, and the built-in microphone is cut off. **9** □ (line output) jack (minijack, monaural) Connect a commercially available speaker system with the built-

Use the mounting screw whose length is  $4.5 \text{ mm} \pm 0.2 \text{ mm}$  only. Use of

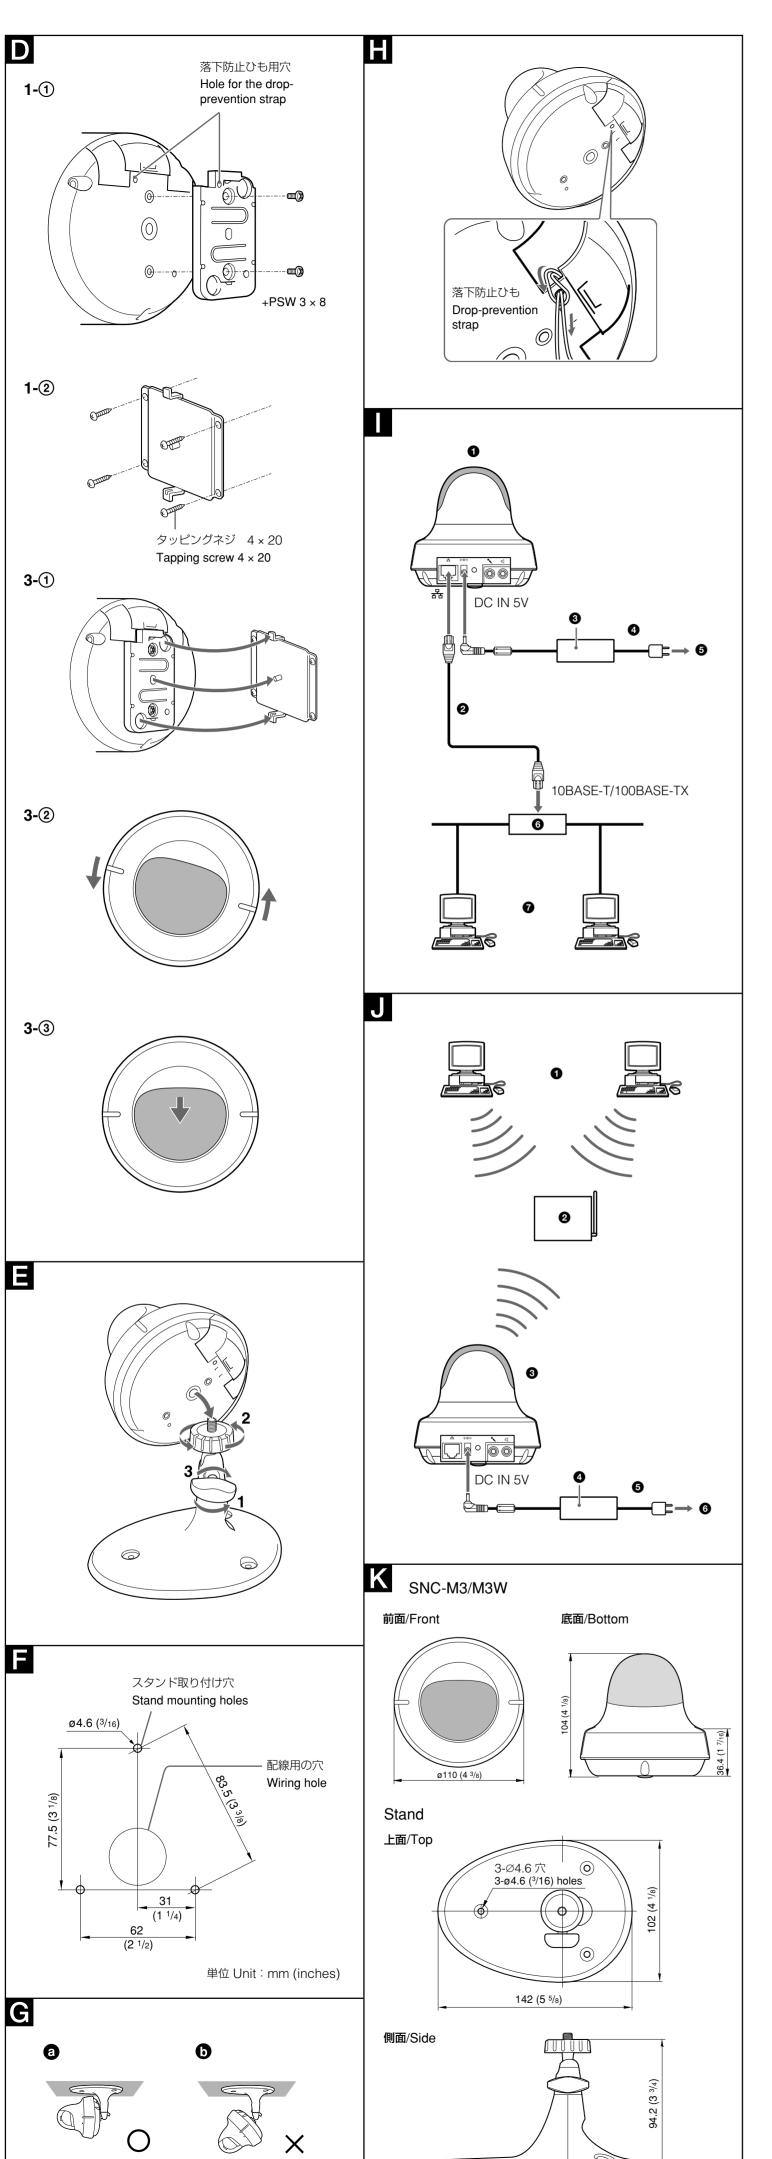

# カメラの映像を見る

この設置説明書にしたがってカメラを正しく設置、接続したあと、付属 のCD-ROMに収録されているユーザーガイドをご覧になって操作して ください。

### 壁や天井に設置する場合のご注意

な強度がないと落下して大けがの原因となります。

- 壁や天井に設置する場合は、専門の工事業者に依頼してください。 ● 壁や天井への設置は、本機とスタンドを含む重量に充分耐えられる 強度があることをお確かめの上、確実に取り付けてください。充分
- 落下事故防止のため、付属の落下防止ひもは、必ずジャンクション ボックス、または壁や天井などに固定してください。
- 壁や天井へ設置した場合は、1年に一度は取り付けがゆるんでいない ことを点検してください。また、使用状況に応じて点検の間隔を短 くしてください。

### 壁に取り付ける

カメラを壁に取り付ける場合は、付属の壁掛けホルダーとブラケットを 使って設置します。

- 1 壁掛けホルダーとブラケットをカメラ本体と壁に取り付ける。 ① 壁掛けホルダー(本体用)をカメラ本体に付属のネジ2本(+PSW
- 3×8)を使って図のように取り付ける。 ② 壁掛けブラケット(壁用)を付属のタッピングネジ 4×20(4本)
- 2 AC電源アダプターやLANケーブルをカメラに接続する。
- 接続のしかたについては「接続」を参照してください。 **3** カメラを壁掛けブラケットに取り付ける。

で壁に固定する。

- ① カメラに取り付けたホルダーを壁のブラケットに対して図のよ うに差し込む。
- ② カメラのブラケットの差し込み口に壁のブラケットが正しくは まっていることを確認したら、カメラを反時計方向に回す。 ③ カメラをそのまま下方向へ押し下げる。

- 壁掛けブラケットを使ってカメラを壁に設置するときは、電源コー ドやLANケーブルがカメラと壁の間に挟み込まれないようにご注意 ください。
- 設置するときは、ネジがゆるまないようしっかりと締めてください。

#### 天井に取り付ける

カメラを天井に取り付ける場合は、付属のスタンドを使って設置します。

#### 付属スタンドの取り付け 🖪

- 1 スタンドのロックネジをゆるめる。
- 2 スタンドの三脚ネジを回し、カメラの三脚ネジにしっかり締め
- 3 カメラの方向を決め、ロックネジをしっかりと締め付ける。

スタンドを天井に取り付ける前に、天井から出ている接続ケーブルをス タンドの穴に通してください。

取り付け寸法図 🖪 図を参照して、天井にあける配線用の穴および付属スタンド取り付け用

### の穴の位置と寸法を決めてください。

るように取り付けてください。

天井設置時のご注意 G カメラを天井に設置するときは、図②のようにカメラと天井が水平にな

ますのでご注意ください。

# 取り付けネジについて

付属のスタンドには $\phi$ 4.6 mmの穴が3か所あいています。この穴を使っ てスタンドをネジ止めします。設置する場所や材質により、使用するネ ジ類が異なります。

鋼材の場合: M4ネジ(付属していません)とナットで固定してください。 木材の場合:付属のタッピンネジ(4×20)で固定してください。板厚は 15 mm以上必要です。

- **コンクリート壁の場合**: ドライビット、またはプラグボルト(付属してい ません)で固定してください。
- **ジャンクションボックスの場合**:ジャンクションボックスのネジ穴に 合ったネジ(付属していません)で固定してください。

# 棚やデスクトップに設置する

カメラを棚やデスクトップに設置する場合は、付属のスタンドを使いま す。(スタンドの取り付けは、「天井に取り付ける|参照。) スタンドは平らな所に設置し、カメラが転倒しないようネジで固定して

### ください。 ご注意

高い位置の棚に設置する場合は、スタンドの裏側にゴム足を付けただけ では落下したときにけがや破損の原因となります。必ずネジ止めするな ど、スタンドを棚やデスクトップに固定してください。

# 落下防止ひもについて

カメラを設置する場合は、必ず付属の落下防止ひもを取り付けてくださ い。ひもは、図のように通し穴に通し、壁や天井のジャンクションボック

ス、または壁や天井などにネジ(付属していません)で固定してください。

# ご注意

ネットワークケーブルやマイク入力端子、ライン出力端子用ケーブルを 接続すると、端子部のふたが閉まらない場合があります。無理にふたを 閉めると故障の原因になりますので、その場合はふたをはずしたままお 使いください。

# イーサーネット接続

本機のようマットワークポートを市販のネットワークケーブル(ストレー ト)でルーターまたはハブへ接続し、DC IN 5V端子にACアダプターを 接続します。

- ① SNC-M3/M3W(上面)
- ② 市販のネットワークケーブル(ストレート)
- 4 電源コード(付属)
- ❸ 電源コンセントへ
- ⑥ ルーターまたはハブ
- **⑦** ネットワーク

# ワイヤレスネットワーク接続

本機の<del>22</del>ネットワークポートに何もつながずに、DC IN 5V端子にAC アダプターを接続します。

- **1** ネットワーク
- 2 アクセスポイント 3 SNC-M3W(上面)
- 4 AC電源アダプター(付属)
- ⑤ 電源コード(付属) 6 電源コンセントへ

単位 Unit: mm (inches)

### CMOSセンサー特有の現象

次のような現象が起きることがありますが、故障ではありません。 折り返しひずみ: 縞模様、線などを写すと、ぎざぎざのちらつきが見 えます。

# 主な仕様

D

対応ブラウザ Internet Explorer Ver5.5, 6.0 (対応OS: Windows 2000/XP) 1/4型CMOS 撮像素子 有効画素数 約31万画素(652(H)×482(V)) 焦点距離: f = 3.7mm、最大口径比: F2.0 内蔵レンズ 画角:水平51.0°、垂直38.9° 撮影距離: 0.8m~∞ パン/チルト機能 水平±60°、垂直+10°~-60°、 最大速度100°/秒 MPEG4/JPEG(切り替え) 映像圧縮方式 最大フレームレート

MPEG4: 30fps(QVGA) JPEG: 30fps(QVGA) 音声圧縮方式 G.726(40.32.24.16kbps) 対応プロトコル TCP/IP、ARP、ICMP、DHCP、DNS、HTTP、 FTP\SMTP\NTP

ネットワークポート 10BASE-T / 100BASE-TX(RJ-45)

無線LAN 準拠規格: IEEE802.11b、周波数: 2.4GHz帯 伝送速度:11Mbps、5.5Mbps、2Mbps、 1Mbps(自動切換) セキュリティ: WEP(64/128ビット)

内蔵マイク エレクトレットコンデンサーマイクロホン(全指向 性) マイク入力端子 ミニジャック(モノラル)

プラグインパワー方式対応(基準電圧2.4VDC) 推奨負荷インピーダンス2.2kΩ ライン出力端子 ミニジャック(モノラル)、最大出力レベル

1Vrms 水平解像度 400 TV本 電源電圧 DC 5V

消費電力 SNC-M3: 5.5W SNC-M3W: 8.2W 動作温度 0℃~+40℃ 動作湿度 20~80% 保存温度 -20°C~+60°C 保存湿度 20~95%

質量 カメラ: SNC-M3:約350g SNC-M3W:約380g スタンド:約80g 外形寸法(K) カメラ: Ø110×104 mm(外径/高さ)、突起部は

含まず スタンド: 142×94.2×102mm(幅/高さ/奥行 き)

## 付属品

AC電源アダプター(1)、電源コード(1)、スタンド(1)、壁掛けホル ダー(1)、壁掛けブラケット(1)、落下防止ひも(1)、ゴム足(4)、タッ ピンネジ(4×20)(4)、+PSWネジ(3×8)(2)、保証書(冊子)(1)、保 証シート(1)、CD-ROM (ユーザーガイド、付属プログラム)(1)、設 置説明書(1)

本機の仕様および外観は、改良のため予告なく変更することがあります が、ご了承ください。

### (SNC-M3のみ)

この装置は、情報処理装置等電波障害自主規制協議会(VCCI)の基準 に基づくクラスB情報技術装置です。この装置は、家庭環境で使用す ることを目的としていますが、この装置がラジオやテレビジョン受信 機に近接して使用されると、受信障害を引き起こすことがあります。 取扱説明書に従って正しい取り扱いをしてください。

# 定期交換部品について

本機で使用されている部品の中には有寿命部品として定期交換が必要 なもの(電解コンデンサーなど)があります。 使用環境や条件により部品の寿命は異なりますので、長期間で使用さ

れる場合は定期点検をお勧めします。 ◆詳しくはお買い上げ店にお問い合わせください。

# 保証書とアフターサービス

# 保証書

この製品には保証書が添付されていますので、お買い上げの際にお受け 取りください。 所定事項の記入および記載内容をお確かめのうえ、大切に保存してくだ

# アフターサービス

### 調子が悪いときはまずチェックを この説明書をもう一度ご覧になってお調べください。

# それでも具合の悪いときはサービスへ

お買い上げ店、またはお近くのソニー業務用製品ご相談窓口にご相談く ださい。

# 保証期間中の修理は

保証書の記載内容に基づいて修理させていただきます。詳しくは保証書 をご覧ください。

保証期間経過後の修理は 修理によって機能が維持できる場合は、ご要望により有料修理させてい

キュリティーサービスではなく、また確実な安全を保障するもの

ただきます。

# 本ネットワークカメラで提供するシステムおよびサービスはセ

- ではありません。 • ネットワークカメラをご使用されることにより、インターネット を通じて容易にカメラ映像にアクセスすることが可能です。一方 で第三者によりネットワークを通じてモニタリング画像および音 声を閲覧、使用等される可能性があります。ネットワークのご利
- 用については、被写体のプライバシー、肖像権などを考慮のう え、お客様の責任で行ってください。 • ネットワークカメラへのアクセス権限は、ユーザー名およびパス ワードを設定することにより行われます。それ以上のカメラによ
- 諸事情による本ネットワークカメラに関連するサービスの停止、 中断について、ソニーは一切の責任を負いません。

る認証作業は行われません。

### Monitoring the Camera Image

Install and connect the camera properly following the instructions in this manual, then operate the camera referring to the User's Guide contained in the supplied CD-ROM.

### Installation

### Notes on installation on a wall/ceiling

- When you attach the camera to a wall or ceiling, entrust the installation to an experienced contractor or installer
- · Attach the camera to the wall or ceiling firmly after making sure the wall or ceiling is strong enough to bear the weight of the camera and the stand. If it is not strong enough, the camera may fall and cause
- Be sure to fix the supplied strap to a junction box, wall or ceiling withe a screw to prevent the camera from falling
- Check periodically, at least once a year, to ensure that the connection has not loosened. If conditions warrant, make this periodic check more frequently.

# Installing on a wall

To install the camera on a wall, use the supplied wall-mounting holder and bracket.

- 1 Install the supplied wall-mounting holder and bracket to the camera and the wall
- ① Attach the wall-mounting holder to the camera with the
- supplied 2 screws (+PSW 3 × 8) as follows. ② Fix the wall-mounting bracket to the wall with the supplied 4
- tapping screws. 2 Connect the AC power adaptor and the LAN cable to the
- See "Connecting Power and Network" for details of connection. 3 Install the camera on the wall.
- ① Mount the wall-mounting holder attached to the camera as an illustration to the wall-mounting bracket fixed on the wall.
- 2 Check the brackets are secure, then turn the camera to the counterclockwise.
- ③ Push the camera downward.

# **Notes**

- · When you install the camera on a wall using the wall mounting bracket, take care not to trap the AC power cord or the LAN cable
- between the camera and the wall.

Installing on a Ceiling

· Secure the screws firmly so that they will not come loose.

## When installing the camera on a ceiling, use the supplied stand.

- Attaching the supplied stand 1 Loosen the lock screw on the stand.
- 2 Turn the tripod screw on the stand until it is firmly secured to the tripod screw on the camera.
- **3** Determine the camera direction and tighten the lock screw on the stand.

# Before installing the stand to the ceiling, feed the wires extended from

the ceiling or wall through the opening on the rear of the stand. Mounting diagram

#### Use this diagram when you determine the positions and sizes of the wiring hole and the mounting holes for the supplied stand.

Note on installing on a ceiling G When installing the camera on a ceiling, determine the camera direction so that camera and ceiling become level as shown

illustration a. If the camera is installed as in illustration **6**, the monitor image

#### may be inclined during Pan/Tilt operation. Mounting screws

The supplied stand is provided with three Ø 4.6 mm (3/16 inch) mounting holes. Install the stand to a ceiling or wall with screws through these holes. The required mounting screws differ depending on the installation location and its material Steel wall or ceiling: Use M4 bolts (not supplied) and nuts.

**Wood wall or ceiling:** Use the supplied tapping screws  $(4 \times 20)$ . The panel thickness must be 15 mm (5/8 inch) or more. Concrete wall: Use appropriate anchors, bolts and plugs (not supplied) for concrete walls.

**Junction box:** Use screws (not supplied) to match the holes on the junction box.

# Installing on a Shelf or a Desk Top

Stick the supplied four rubber feet on the bottom of the stand, and place the camera on a desk top.

# Note

When you install the camera on a tall shelf, an injury or breakage may result if only the rubber feet are attached to the rear of the stand. The camera and the stand must be fixed to the shelf or desktop with screws

# **Drop-prevention strap**

When installing the camera, be sure to use the supplied dropprevention strap. First, feed the string through the hole on the rear of the camera. Fix it with a screw (not supplied) to the junction box or something of the wall or ceiling.

# Connecting Power and Network

When you connect the network cable, cables for the microphone input connector and for the line output connectors, the cap of the connectors section may not close. In this case, leave it open during use because forcing the cap close may be a cause of a trouble.

# **Ethernet connection**

Connect the 🖧 network port of this unit to the router or the hub with a commercially available network cable (straight), and connect the AC adapter to the DC IN 5V connector.

- 1 SNC-M3/M3W (top)
- 2 Commercially available network cable (straight cable) 3 AC power adaptor (supplied) Use the supplied plug adapter to match to the configuration of
- 4 Power cord (supplied) To a wall outlet

the outlet.

- 6 Router or Hub Network
- the AC adapter to the DC IN 5V connector. Network

Wireless network connection

- 2 Access point 3 SNC-M3W (top)
- 4 AC power adaptor (supplied) Use the supplied plug adapter to match to the configuration of

Connect nothing to the 꿈 network port of this unit, and connect

- **5** Power cord (supplied)
- To a wall outlet

## Notes on Use

#### Operating or storage location

- Avoid operating or storing the camera in the following locations: • Extremely hot or cold places (Operating temperature: 0 °C to
- +40 °C [32 °F to 104 °F])
- Exposed to direct sunlight for a long time, or close to heating
  - equipment (e.g., near heaters) Close to sources of strong magnetism
  - Close to sources of powerful electromagnetic radiation, such as radios or TV transmitters Locations subject to strong vibration or shock
  - Ventilation To prevent heat buildup, do not block air circulation around the

Treatment of the lens cover Take care not to stain, rap on or press strongly the lens cover which covers the lens of the camera. These acts may inhibit the

camera to bring out its performance enough and may cause a

#### Transportation

malfunction

D

When transporting the camera, repack it as originally packed at the factory or in materials of equal quality.

- Use a blower to remove dust from the lens cover. Use a soft, dry cloth to clean the external surfaces of the camera. Stubborn stains can be removed using a soft cloth
- Do not use volatile solvents such as alcohol, benzene or thinners as they may damage the surface finishes.

dampened with a small quantity of detergent solution, then

#### Note on laser beams

Laser beams may damage a CMOS sensor. You are cautioned that the surface of a CMOS sensor should not be exposed to laser beam radiation in an environment where a laser beam device is used

## CMOS Sensor Characteristics

The following conditions may be observed when using a CMOS sensor camera. They are not due to any fault within the camera.

Jagged picture: When viewing stripes, straight lines, or similar

patterns, the image on the screen may appear jagged.

# Specifications

Protocol

Network port

Wireless Lan

Line output

Dimensions (K)

Internet Explorer Ver5.5 or 6.0 Web browser (Available OS: Windows 2000/XP) Image device 1/4 type CMOS Effective picture elements 310 K pixels CMOS sensor Built-in lens Focal length: f = 3.7 mm, Maximum F number: F2.0 View angle: 51.0° (horizontal), 38.9° (vertical) Shooting distance: 0.8 m to ∞ Video compression format MPEG4/JPEG (selectable)  $\pm 60$  ° (horizontal), +10 °/-60 ° (vertical), Pan/tilt action

Maximum frame rate MPEG4: 30 fps (QVGA) JPEG: 30 fps (QVGA) Audio compression format G.726 (40, 32, 24, and 16 kbps) TCP/IP, ARP, ICMP, DHCP, DNS, HTTP, FTP, SMTP, NTP

maximum speed 100 °/s

10BASE-T/100BASE-TX (RJ-45) Utilization: IEEE802.11b Frequency band: 2.4 GHz Transfer speed: 11 Mbps, 5.5 Mbps,

2 Mbps, 1 Mbps (switchable automatically) Security: WEP (64/128 bits) Built-in microphone Electret condenser microphone (omnidirectional)

Mic input Minijack (monaural) Plug-in-power supported (rated voltage: 2.4 V DC) Recommended load impedance 2.2 k $\Omega$ 

level: 1 Vrms Horizontal resolution 400 TV lines 5 V DC Power supply Power consumption SNC-M3: 5.5 W

SNC-M3W: 8.2 W Operating temperature 0 °C to +40 °C (32 °F to 104 °F) Operating humidity 20 to 80 % -20 °C to +60 °C (-4 °F to 140 °F) Storage temperature Storage humidity 20 to 95 %

> SNC-M3: Approx. 350 g (12.3 oz) SNC-M3W: Approx. 380 g (13.4 oz) Stand: Approx. 80 g (2.8 oz) Camera: Ø110 × 104 mm (d/h) ( $\emptyset 4^{3}/8 \times 4^{1}/8$  inches) not including the

Minijack (monaural), Maximum output

#### projecting parts Stand: $142 \times 94.2 \times 102 \text{ mm (w/h/d)}$ $(5.5/8 \times 3.3/4 \times 4.1/8 \text{ inches})$

Supplied accessories AC power adaptor (1), Power cord (1), Stand (1), Wall-mounting holder (1), Wall-mounting bracket (1), Rubber foot (4), Dropprevention strap (1), Tapping screws  $(4 \times 20)$  (4), +PSW screws  $(3 \times 8)$  (2), CD-ROM (User's Guide and supplied programs) (1),

Installation manual (1) Design and specifications are subject to change without notice.

# Regular parts replacement

Some of the parts that make up this product (electrolytic condenser, for example) need replacing regularly depending on their life expectancies.

condition in which this product is used and the length of time it is used, so we recommend regular checks. Consult the dealer from whom you bought it for details.

The lives of parts differ according to the environment or

 The Network Camera system and related service is not a security service. When monitoring the image and audio of the purchased Network Camera, there is a risk that the monitoring image or audio may be viewed or used by a third-party via the network. It is provided only as a convenience for people to easily access their cameras via the

When you use the Network Camera, please take into account and ensure the privacy and portrait right of the object at your own responsibility.

Access to the camera or system is limited to the user setting up a user name and password only. No further authentication is provided nor should the user presume that such filtering is done by the service.

Sony assumes no liability should the service related to the Network Camera goes down or interrupted for whatever reason.